English Version

Daniamant

ODEO Strobe™
Installation and Maintenance Instructions



Description
The **ODEO Strobe**™ is a manually activated position indicating light. It meets and exceeds the SOLAS requirements for a lifejacket light with an additional IR component to the signal.

Daniamant Limited
Unit 3, The Admiral Park, Airport Service Road, Portsmouth, UK PO3 5RQ
Telephone: +44 (0)23 9267 5100 Facsimile: +44 (0)23 9267 5101
www.daniamant.com

32-109 Issue 4 (C7094)



Installation

1. Remove from external packaging.
2. Open battery compartment by ensuring white tab is raised and twisting off base.
3. Fit four 1.5v AA cells. Cells used must be from these brands:
    - Varta Alkaline
    - Ansmann Industrial Lithium
    - Energizer Ultimate Lithium
    - Energizer Industrial Alkaline

    (Lithium for best performance) *DO NOT MIX BATTERY CHEMISTRIES OR OLD AND NEW BATTERIES* Upon insertion, slide each battery towards its positive terminal to achieve good contact.
4. Close battery compartment, and engage white locking tab.
5. Secure **ODEO Strobe**™ in a suitable location so that it may be accessed quickly in an emergency, such as a grab bag, or directly to lifejacket.

Lifejacket Mounting



Attach lanyard to secure location.



Slide hook and loop strap under webbing.



Secure light in place. Take care to avoid interfering with correct operation of lifejacket.

Usage


Activate the strobe by turning the white ring in the direction of the arrow, then hold vertically above the head position.

It is recommended that spare AA batteries are stored at all times with the **ODEO Strobe**™ flare to ensure extended operation if required.



Do not look into the flare, or direct flare into the eyes of nearby persons.



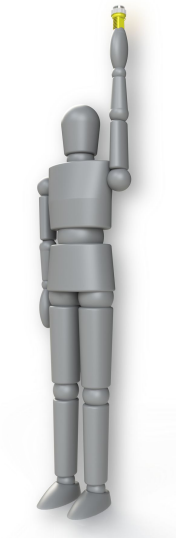

Maintenance

Regularly inspect the unit for signs of damage and make sure that the batteries are installed and ready to activate.

Replace the batteries each year to ensure the unit is ready to be deployed.

When replacing batteries, apply a small amount of silicone grease to the seal.

Please note, other than the batteries, there are no user serviceable parts inside this light. If the light fails to illuminate during test, it needs to be replaced.

After use in salt water or long periods of storage, clean the unit in fresh water.

Testing

Do not look into the flare, or direct flare into the eyes of nearby persons.

It is recommended testing is carried out on a regular basis, depending on use. Please note that excessive testing or demonstrations will reduce battery life available for an emergency.

Warranty

Your **ODEO Strobe**™ electronic flare is warranted against manufacturing defects in material and workmanship for a period of 2 years from the date of purchase. Daniamant will, at its discretion, repair or replace faulty product free of charge. Proof of purchase will be required in order for a warranty claim to be valid from the original purchase. All claims should be made in writing to the original vendor or Daniamant.

Tampering with the unit will void any warranty.

Disclaimer

The technical data, information and illustrations in these instructions are believed to be correct at the time of print. No liability is accepted for any inaccuracies or omissions.

Product Disposal Instructions



Daniamant's Survivor Location Lights contain batteries as well as electrical and electronic components, and must therefore be segregated from the domestic waste stream and recycled. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Daniamant's lights are marked with the symbol below which conveys that this waste must be treated separately from household waste.

To ensure compliance with the WEEE and Battery Regulations, the Survivor Location Lights placed on the market in the UK or Denmark should be returned to Daniamant in the UK or Denmark, or deposited in your nearest WEEE Designated Collection Facility, operated by your Local Authority.

Further copies of this installation and maintenance instructions
are available to download from our website **www.daniamant.com**
A copy of these instructions must be held with the ships/owners training manual.